

LELO

TIANI™ DUO



USER MANUAL

TIANI_DUO_PUB2_Q223_EN

Experience a new type of stimulation for
a new kind of orgasm that feels much
stronger and more focused on your
pleasure points.

Enjoy it often, wisely and with care.

Congratulations on acquiring TIANI™ DUO. Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT

Your pleasure object has been locked for transportation.

To unlock, simply connect the charger or see below.

SAFETY

Please consult your healthcare provider with any questions or concerns you may have regarding your condition.

- This device should be used by people aged 18 years and over.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Minors should not clean and/or use the device unsupervised.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

COMPLIANCE STATEMENT

a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- This class B digital apparatus complies with Canadian ICES-003.

b. Déclarations de la FCC et de l'IC

Cet appareil répond aux exigences de l'article 15 du Règlement de la FCC et aux normes RSS exemptes de licence d'Industrie Canada.

Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
 - (2) doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement indésirable.
- Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consulting the seller, the device dealer or an experienced radio/TV technician for help.

GETTING STARTED

Before first use, charge your TIANI™ DUO for 2 hours

INSERTING BATTERIES IN REMOTE

- The battery cover on the remote should be loose when you first open your product. Lift it off and insert the batteries as shown in Diagram 1.
- Carefully place the cover on top of the battery compartment, ensuring that the ridges are aligned as shown in Diagram 2.


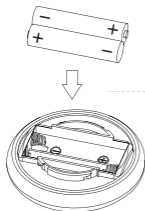 


Diagram 1

 Diagram 2

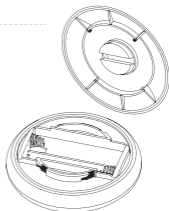

Once in place, insert the plastic key in the cover's slot and do a 10 degree twist clockwise to lock shut. To open, always use the key and make a 10 degree turn counterclockwise before replacing the batteries - using other tools such as coins may damage the surface of the remote (see Diagram 3)


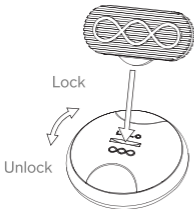 


Diagram 3


TIP: You may also use flattened palms on either side of the remote to push and twist the lid without using the key to lock and unlock.

Always ensure the remote is fastened shut before using in water.

 GETTING TO KNOW YOUR TIANI™ DUO

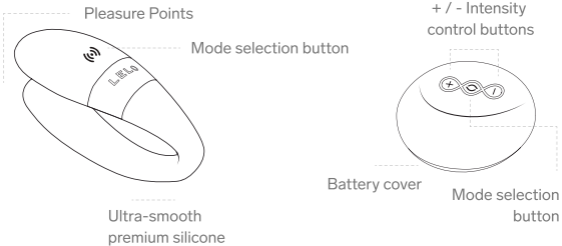

USING YOUR TIANI™ DUO

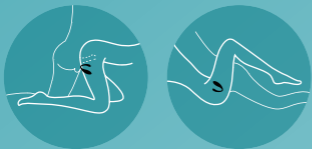 

Tip: For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to TIANI™ DUO before and during use.

USING YOUR TIANI™ DUO WITHOUT REMOTE

 
- Before the first use, charge your TIANI™ DUO for 2 hours.
- Press and hold the (0) button to turn it on.
- Press the (0) button to switch between 8 modes.
- Press the (0) button to increase or decrease the intensity.
- Press and hold the (0) button to turn off.

USING YOUR TIANI™ DUO WITH REMOTE

- Unlock by pressing and holding the + and - buttons simultaneously for 3 seconds until the light turns on.
- Press (0) button on the product to turn it on.
- Press + button to turn on; press again to increase the vibration strength.
- Press (0) button to switch between the 8 vibration patterns.
- Press - button to reduce vibration strength.
- Press and hold - button to turn off.

USING SENSEMOTION™ MODE 1

Turn on your remote by pressing the + button. Once wireless connection is established, the lights on the massager and remote will be illuminated. Your massager will now be operating in SenseMotion mode 1. You can intensify vibrations by tilting the remote. When the remote is moved from a horizontal to a vertical position, vibration strength will increase to maximum level.




USING SENSEMOTION™ MODE 2

When in SenseMotion mode 1, press on your remote to change to SenseMotion mode 2. In this mode, you can alter or intensify vibrations by moving the remote in any direction. Faster movements increase the intensity of vibrations.



CHARGING YOUR TIANI™ DUO

 - Insert the DC plug into the DC port at the base of your TIANI™ DUO.
- Insert the mains plug into a USB Port. The LED on the interface of your TIANI™ DUO will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your TIANI™ DUO will emit a blinking white light.

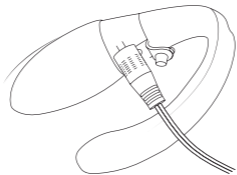

Only use original chargers provided by LELO with your TIANI™ DUO.

CLEANING, STORAGE, AND SAFETY

Using TIANI™ DUO with hand creams or silicone-based lubricants may make the silicone permanently tacky.

TIANI™ DUO is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your TIANI™ DUO thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your TIANI™ DUO in direct sunlight and NEVER expose it to extreme heat.

Store your TIANI™ DUO in a dust-free place and keep it away from products of other materials.

The appliances must only be supplied at SELV.

TROUBLESHOOTING

The LED on your TIANI™ DUO does not pulse when the charger is connected?

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

Your TIANI™ DUO does not activate when the () button is pressed?

- The battery is empty. Recharge your TIANI™ DUO.
- The interface of your TIANI™ DUO is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your TIANI™ DUO or if you have any questions regarding the operation, please contact: customercare@lelo.com

SPECIFICATIONS

MASSAGER

Materials: Body-safe Silicone, ABS Plastic

Finish: Smooth

Size: 90 x 45 x 30 mm / 3.5 x 1.8 x 1.2 in

Weight: 80 g / 0.17 lb

Battery: Li-Ion 200 mAh 3.7 V

Charging: up to 2 h at 5.0 V 200 mA

Rated Power:

- Input: 5V 2.75W
- Output: 3.7V 1W

User time: up to 2 h

Standby: 90 days

Frequency: 60 Hz

Max. noise level: < 60 dB

Interface: 1 button

REMOTE CONTROL

Materials: Body-safe silicone,
ABS Plastic

Size: 64 x 64 x 25 mm /
2.5 X 2.5 X 1.0 in

Weight: 30 g / 0.07 lb

Battery: 2 AAA

Interface: 1 button

REGISTER WARRANTY

To activate your 1-year Limited Warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence that the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at LELO.COM and then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



RoHS



UK
CA

FC



SERIAL NO.

SN

IPX 7



MANUFACTURER DATE



CLASS B DIGITAL APPARATUS



FOLLOW INSTRUCTION FOR USE



Hereby, LELOi AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELOi AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <http://www.lelo.com/regulatory>

DISCLAIMER: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2023 LELoI AB. All rights reserved.

LELoI AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELo Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

www.lelo.com